




VILKUS-62 Grey DPF/SCR-Off Emulator Installation Guide

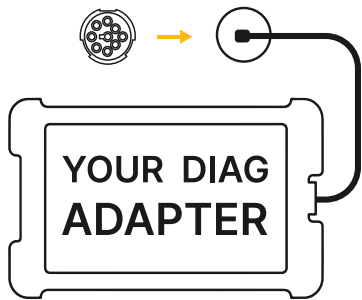


1. Unplug your diagnostic adapter from the diag socket!

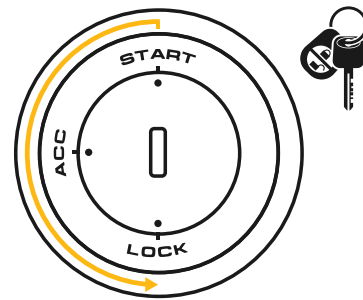


2. Turn the key OFF / LOCK, wait 30 sec.

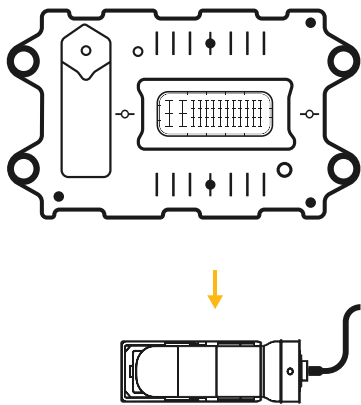


3. Unplug the connector from ACM module.

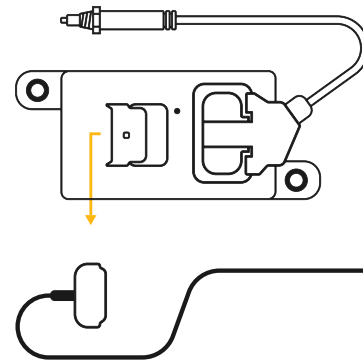


4. Disconnect All NOx sensors.

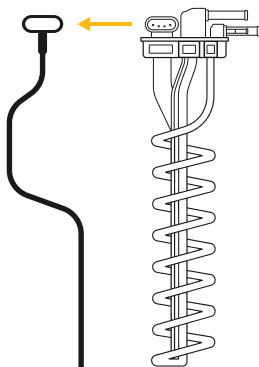


5. Disconnect urea quality sensor.*

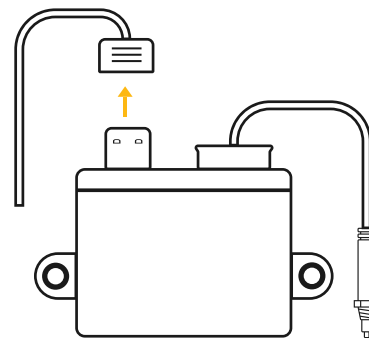


6. Disconnect Particulate Matter Sensor.*

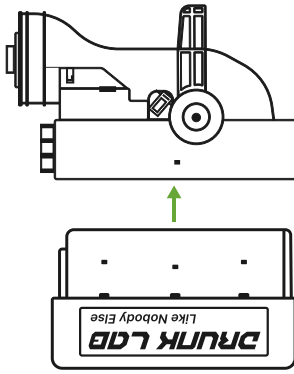


7. Connect **VILKUS-62** emulator instead of ACM.

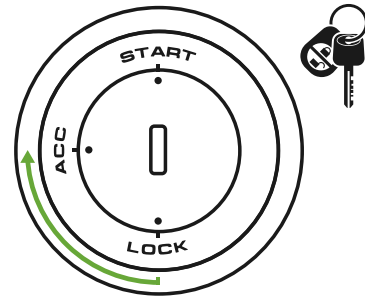


8. Turn the key ACC / ON, wait 60 sec.

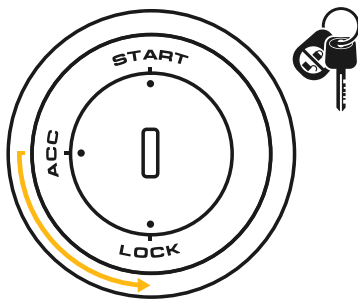

9. Turn the key OFF / LOCK, wait 60 sec.

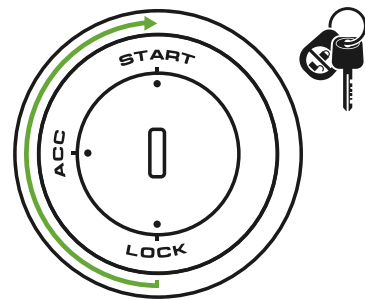

10. Turn the key START and ensure that all aftertreatment faults are gone.

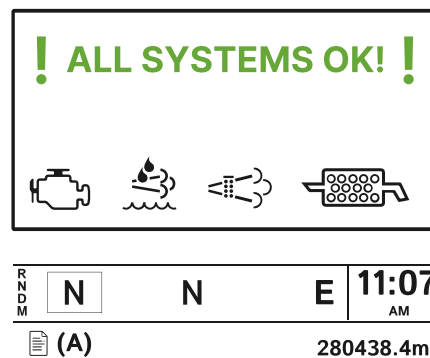

11. Done!

* If present.

If your truck or CE machine is already in derate mode or has non-erasable codes for NOx sensors, it may require our remote assistance along with device installation. Please prepare your diagnostic laptop, download and run Mochester App, select warranty support service and provide us with short case description in the app.